


1.0 Asphalt Patching

ASPHALT PATCHING

1. Mark out all areas that are to be repaired.
2. Neatly cut out each patch with jack-hammer, excavate to stated depth and haul all debris off site.
3. Grade out the subbase of each patch and compact thoroughly with vibratory roller or tamper.
4. Tack coat vertical sides with CRS-1 emulsion to achieve a firm bond between new and old asphalt.
5. Install bituminous surface course asphalt to within 1½" of finished grade and compact thoroughly with steel drum roller.
6. Install bituminous surface course asphalt to finished grade and roll to a firm and compacted finish.
7. Apply a bead of liquid CRS-1 around the edge of each patch to help minimize water penetration.

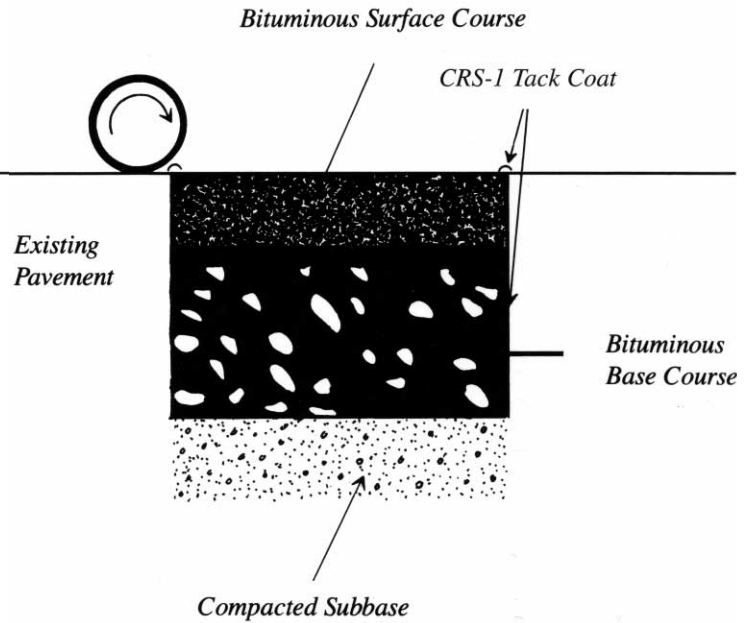

Parking Lot Specialists

162 Lafayette Avenue • Laurel, Maryland 20707

Phone 1-866-670-1234 • Fax (301) 725-8869

www.chamberlaincontractors.com

